TP6820

Photo Display

User Manual

Tenx reserves the right to change or discontinue this product without notice.

tenx technology inc.

CONTENTS

PRODUCT NAME 4
TITLE 4
1. Main Menu Function Instructions 4
1.1 Multi-Picture Preview 4
1.2 Delete the Picture 5
1.3 Return to the Picture 5
1.4 Function Settings 5
1.5 Time/Date Display 5
1.6 FM Radio 6
1.7 Shut Down 6
1.8 Battery Level 6
2. Editor Writer Application Function Instructions 7
2.1 Choose Module and Flash Size 7
2.2 Fill out PID/VID and product name 7
2.3 Auto Run files import 7
2.4 The picture import 7
2.5 Device settings 8
2.6 Operate Function 8
3. Image Viewer Application Function Instructions 9
3.1 Shuffle/Repeat Play Mode Preview 9
3.2 Device Settings 10
3.3 Format Device 10
3.4 Shuffle/Repeat Playing Unsaved Picture 11

3.5 Select the Picture 11
3.6 Picture Editing 12
3.7 Picture Saved 12

PRODUCT NAME

TP6820

TITLE

TP6820 Photo Display Function Definition

1. Main Menu Function Instructions

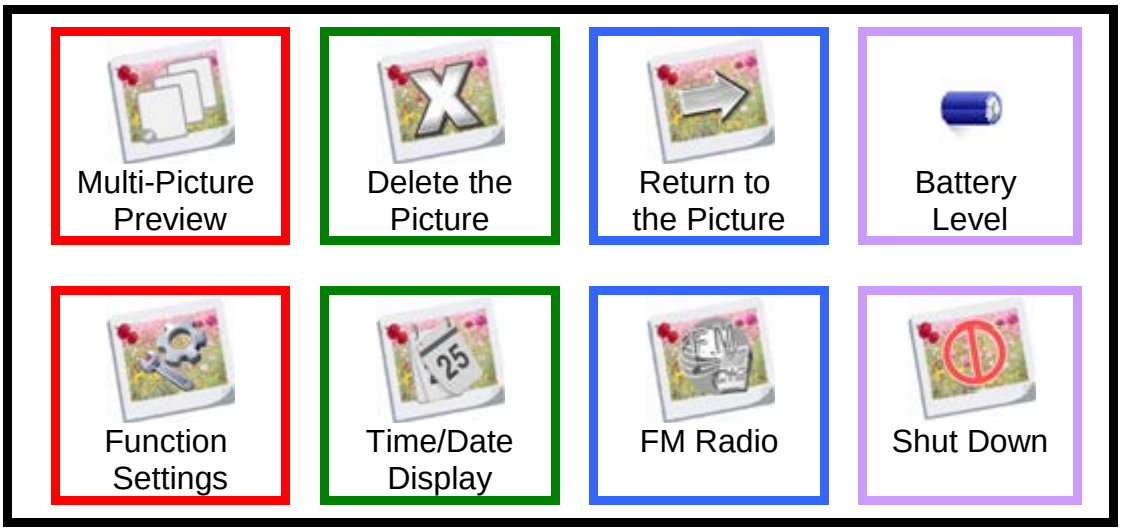

1.1 Multi-Picture Preview

Function Instructions
This function allows 16 pictures to be displayed on the screen at a time, and swiftly choose the picture that you want. Just moves the red frame to open this picture by using of the function key: Up, Down, and then press the Mode button to open the picture.

1.2 Delete the Picture

Function Instructions
Delete the current browsing picture(s).

1.3 Return to the Picture

Function Instructions
Return to the picture from the main menu screen.

1.4 Function Settings

Function Instructions	
Auto Slide time	: Set the time interval from 0 to 31 seconds for playing images in a continuous loop. (0 indicates turn repeat mode off)
Auto standby	: Set auto shutdown after 0 to 31 minutes. 0 indicates no access to the shutdown mode
Brightness Setting	: Set background brightness on a scale of 0 to 7 (0 is the darkest, 7 is the brightest.)
Language	: Setting the imported language.
USB Connecting	: Connects to the USB port.

1.5 Time/Date Display

Function Instructions
This function displays the current time: By year, month, date, hour, and minute, as shown in Fig below :

2008 / 08 / 14 13 : 30

SUN	MON	TUE	WEN	THU	FRI	SAT
					1	2
3	4	5	6	7	8	9
10	11	12	13	14	15	16
17	18	19	20	21	22	23
24	25	26	27	28	29	30
31						

1.6 FM Radio

Function Instructions

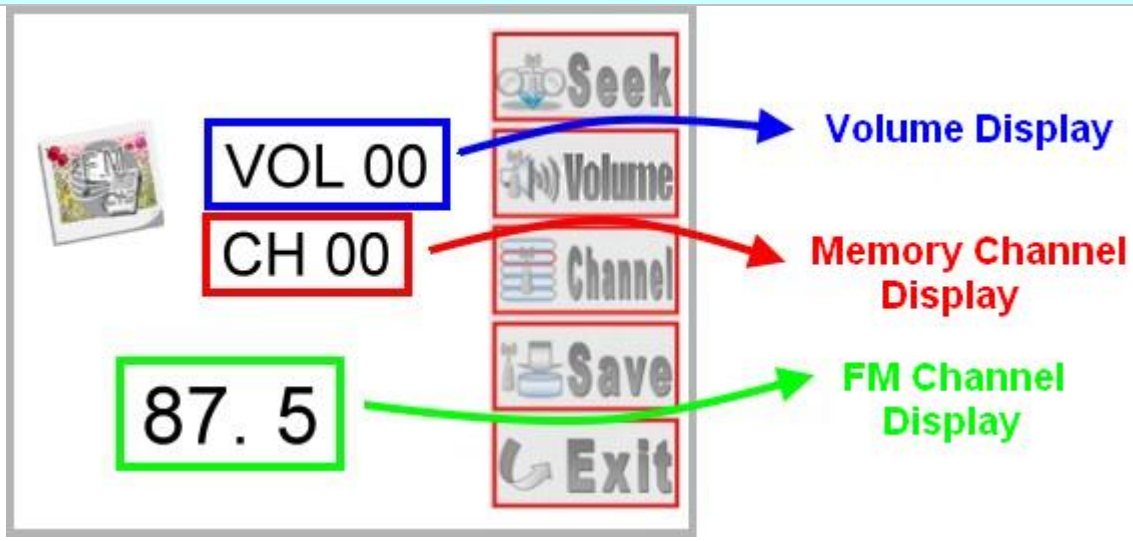

Volume Display : Allows adjusting the sound volume on a scale of 0 to 16.
Memory Channel Display : Allows saving up to 10 preset channel in the memory.
FM Channel Display : Display FM channel frequency.

1.7 Shut Down

Function Instructions

Shut down：Click the Mode button to turn off.
Note：Turn on：Press the Mode button for 3 seconds to turn on.

1.8 Battery Level

Function Instructions

A battery icon shows the remaining Battery level.

Indicates the Battery is fully charged.	Indicates 80% remaining Battery Level.
Indicates 40% Remaining Battery Level.	Indicates 20% remaining Battery Level.
Indicates an empty Battery. At this time, the device will shut off automatically. Please charge!	Battery is being charged
Lock the key	

2. Editor Writer Application Function Instructions

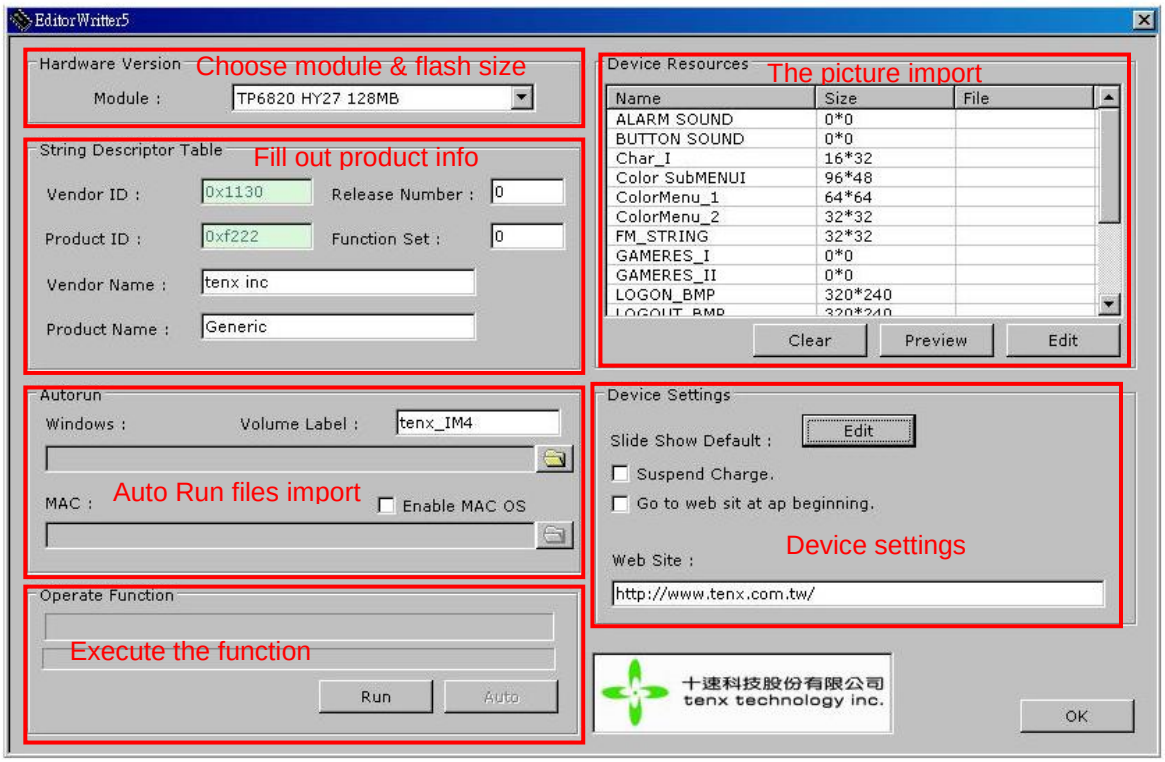

2.1 Choose Module and Flash Size

Function Instructions
Choose TP6820 HY27 128MB。

2.2 Fill out PID/VID and product name

Function Instructions
Fill out PID/VID, manufacturer name, product name.

2.3 Auto Run files import

Function Instructions
After the module and flash size are chosen, the Auto Run files will be imported automatically.

2.4 The picture import

Function Instructions
After the module and flash size are chosen, the picture will be imported automatically.

2.5 Device settings

Function Instructions
1. Edit: user can set the foreground color, background color, shut down time, shuffle time, and backlight brightness. 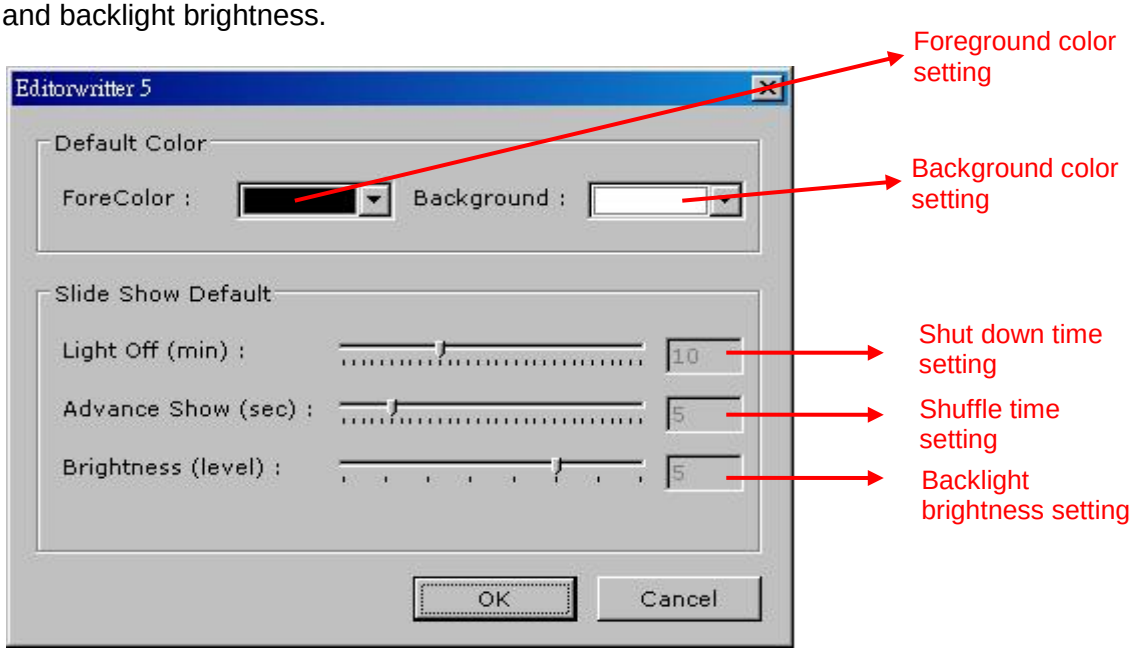   2. Suspend Charge: this option is to select whether the battery is charged when it is in Sta ndby mode; enable this option to charge battery during Standby mode, and disable this option not to charge the battery during Standby mode. Note：Please note, do not enable the Suspend Charge option if need to pass USB-IF Current test standard.

2.6 Operate Function

Function Instructions
After configuring the product data, picture loading and device settings, click Run button to proceed loading. When the data input sequence is completed, click OK button to exit.

3. Image Viewer Application Function Instructions

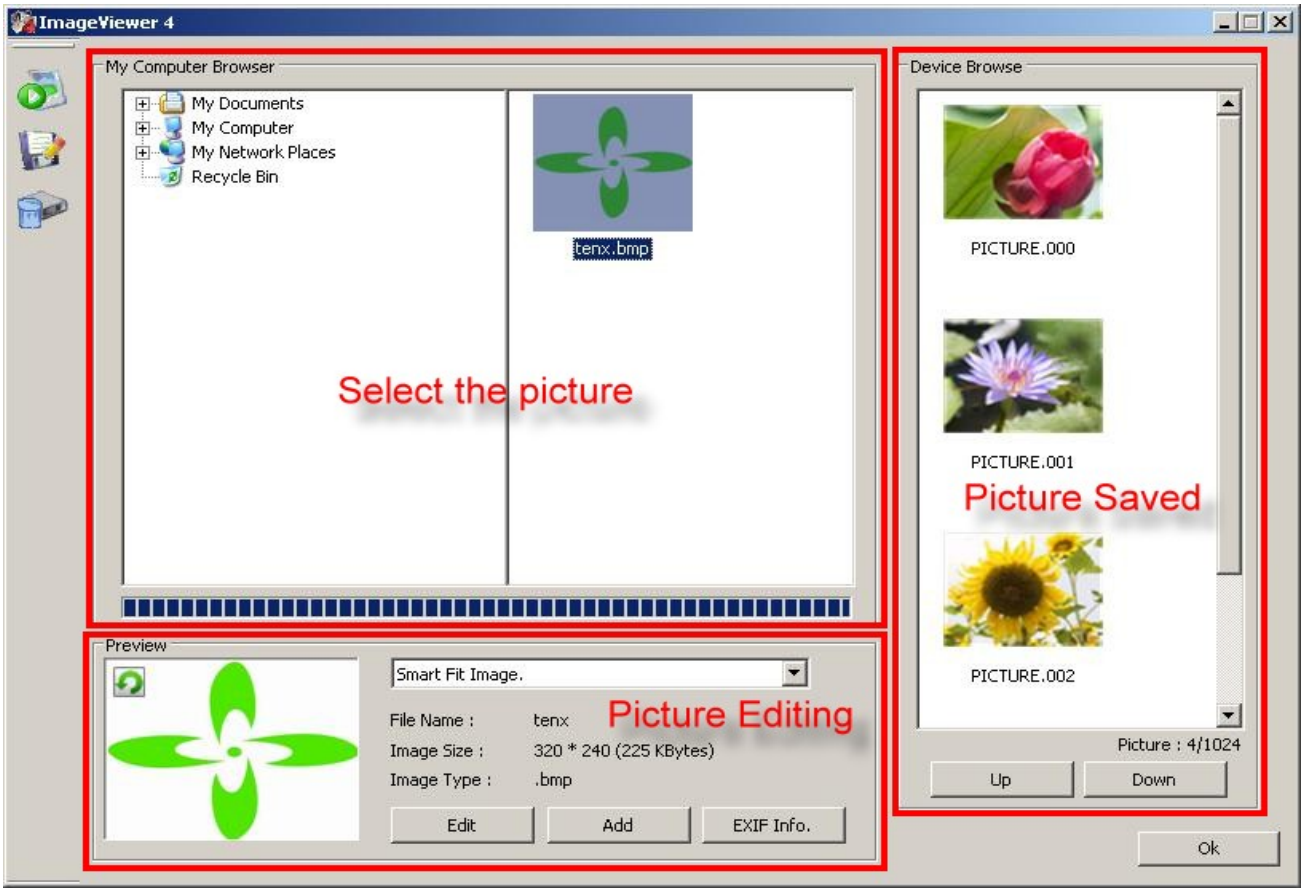

3.1 Shuffle/Repeat Play Mode Preview

Function Instructions
Click this function to repeat playing the saved image file.

3.2 Device Settings

Function Instructions
Click this function to set the foreground color, background color, backlight brightness, shut down time, shuffle time, multi-language import, etc...

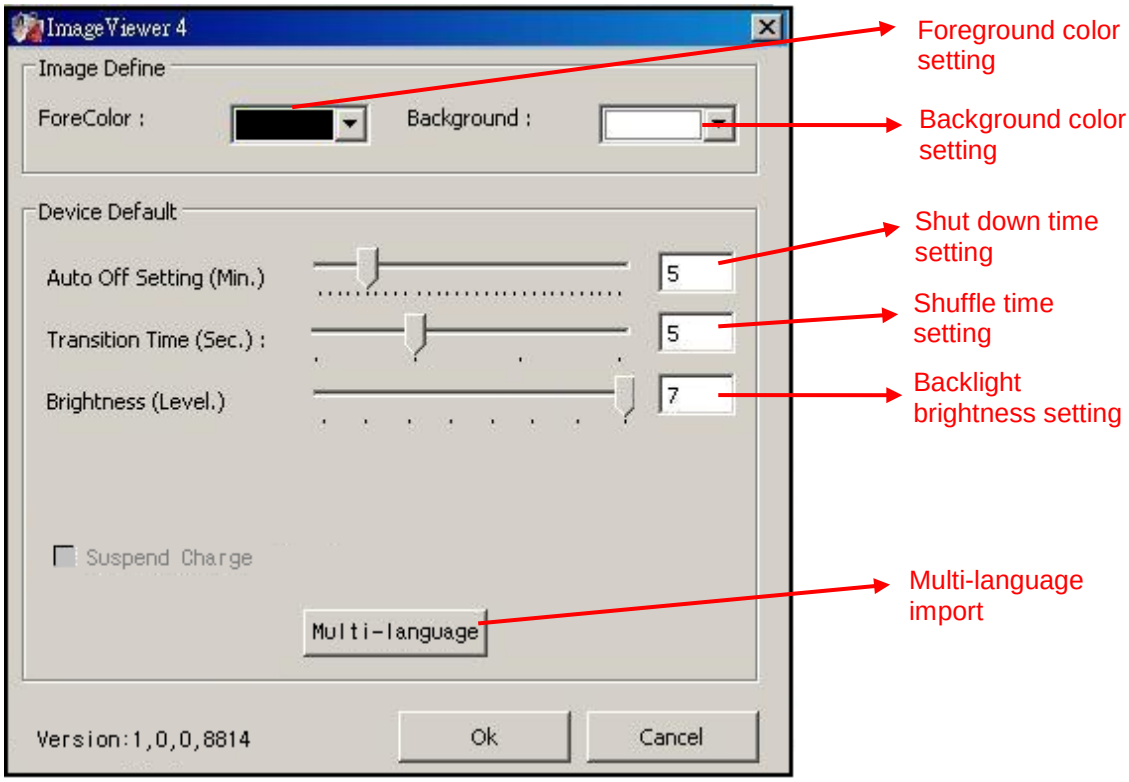

3.3 Format Device

Function Instructions
Click this function to delete all the saved image files and audio files.

3.4 Shuffle/Repeat Playing Unsaved Picture

Function Instructions

Click this function to repeat playing unsaved picture in hard disk.

3.5 Select the Picture

Function Instructions

Click on the image folder or designated location to select the picture that you want, and click Add button to load the picture. Then you can browse the pictures loaded on the device.

Note：You may apply smart fill function or resizing zoom function on the picture icon. These applications will adjust the picture automatically.

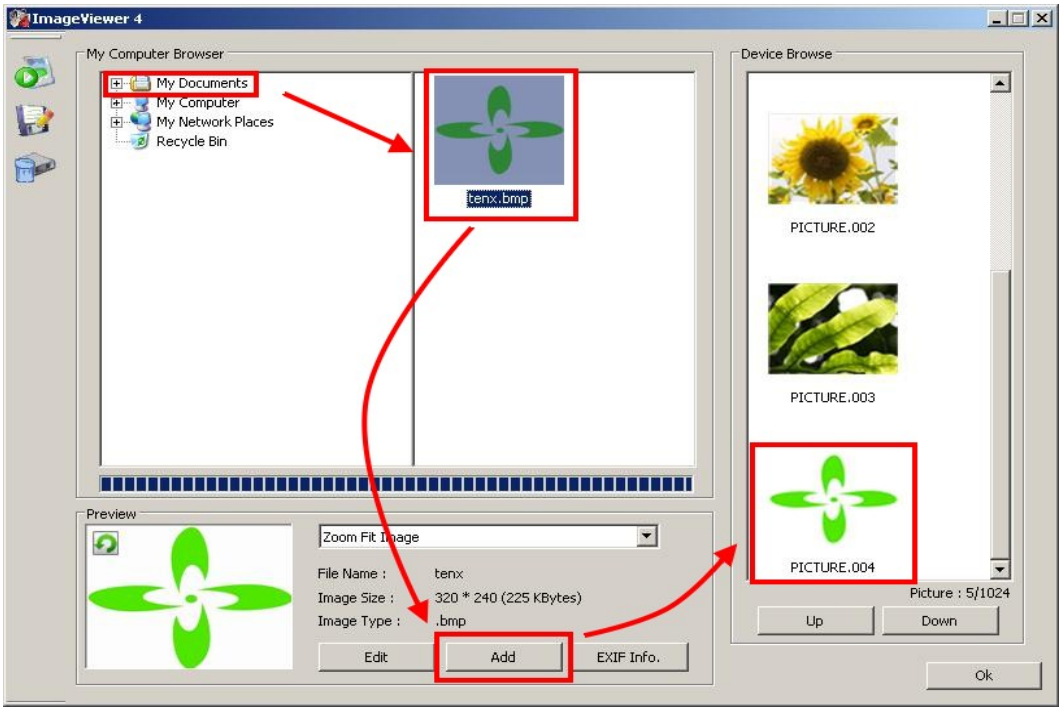

3.6 Picture Editing

Function Instructions
Click the image that you choose and click Edit button to rotate the selected image 90 degrees to the left or the right, Flip Horizontal, Flip Vertical, picture zoom in and zoom out, picture reload, etc…

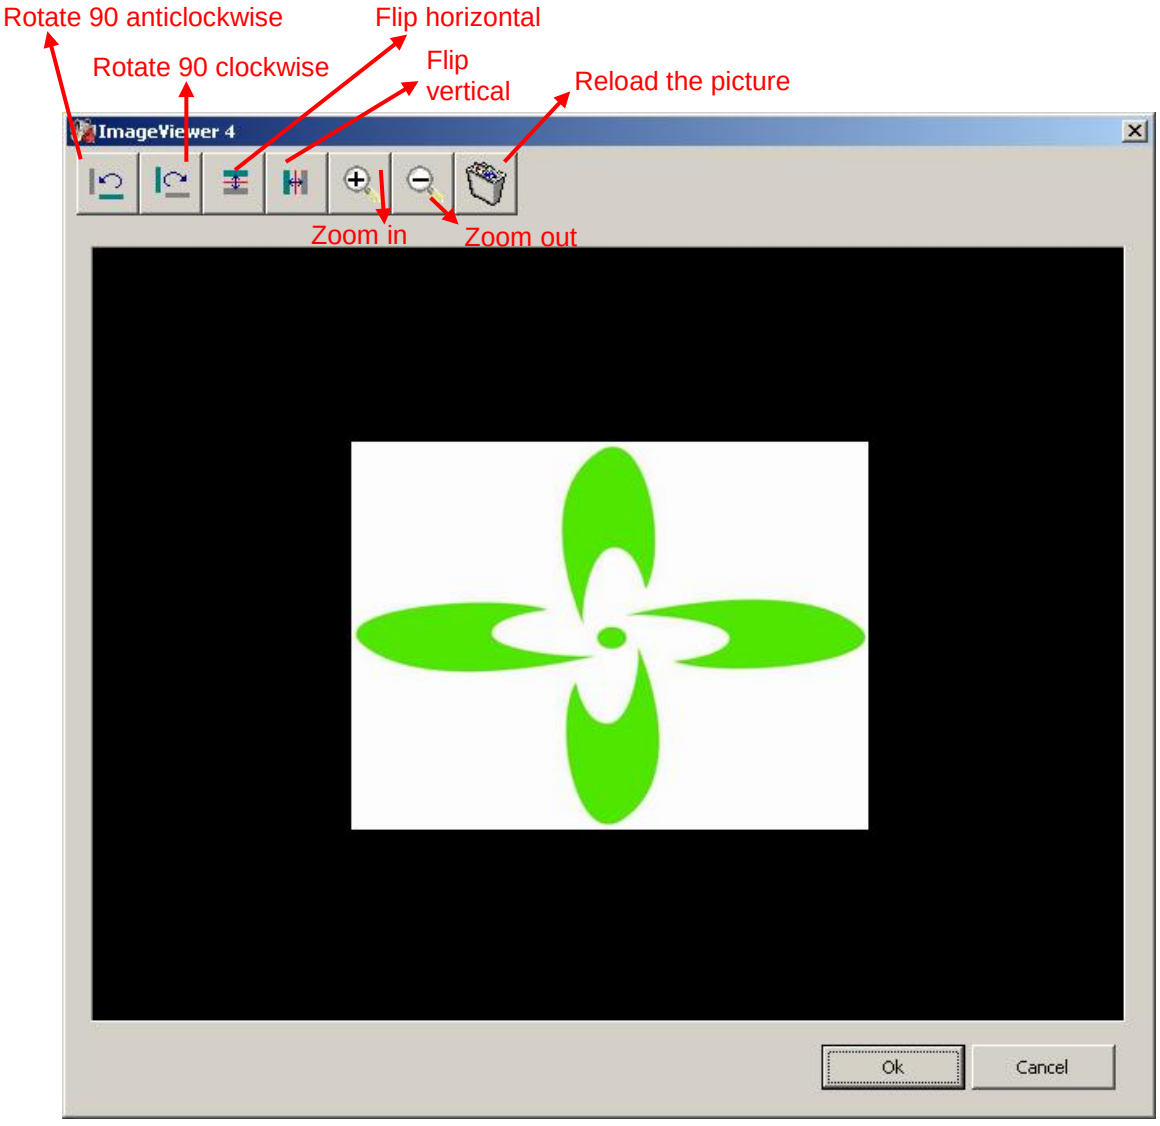

3.7 Picture Saved

Function Instructions
Move the loaded picture(s) up or down, and delete while browsing the picture on the device.